

The craft projects and works featured in kokka-fabric.com are strictly for personal use and enjoyment. Please refrain from selling handmade items using the same exact design (including the pieces



Café Style Kid's Apron

Design & work: Masumi Saito (sinafuku)

Size: For kids with 110cm-140cm height

Instructions

made in different fabrics) featured in kokka-fabric.com.


Materials

 
□ Fabric (Apron panel, Shoulder strap):110cm wide×60cm (Pocket):20cm×20cm

Fabric shown for this sample: (Apron panel) Bitte Mitte JGSA1040-2A

Pattern and Cutting Layout

All measurements are in centimeters (cm). All raw edge.

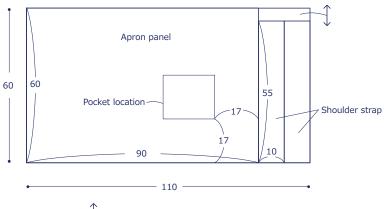



— 20 **—**

① Fold the shoulder strap in four and sew the long end. · Make two pieces. Shoulder strap (front side) Shoulder strap (front side) ⑤ Press down the shoulder Center strap to top side and run stitches. 4 Double fold the top edge of the apron panel. Place the shoulder strap in-between and sew. ② Double fold the pocket opening and sew. Apron panel (front side) Pocket (front side) 6 Fold both ends and bottom and attach it to the apron panel. 3 Double fold both sides and hem of the apron panel and sew.