



Three Piece Set for Schools

Design & work: Kokka Fabric

Size:

<Lesson Bag>

about 30cm (l) about 40cm (w) (Handles excluded)

<Shoes Case>

about 30cm (l) about 23cm (w) (Handle excluded)

<Gym Clothes Bag>

about 38cm (l) about 32cm (w) (Handles excluded)


Materials

- Outer Fabric: about 110cm wide x 120cm
- Lining Fabric: about 100cm wide x 70cm
- Fusible Interfacing (medium weight): about 90cm wide x 70cm
- Flat Tape: 25mm wide x 170cm
- D Ring: 25mm wide x One piece
- Round Cord (medium): 160cm

Fabric shown for this sample: teiban YKA-69080-2C

Pattern

Unit: cm. [] : Seam allowance. Add 1cm seam unless otherwise specified when cutting the fabric.

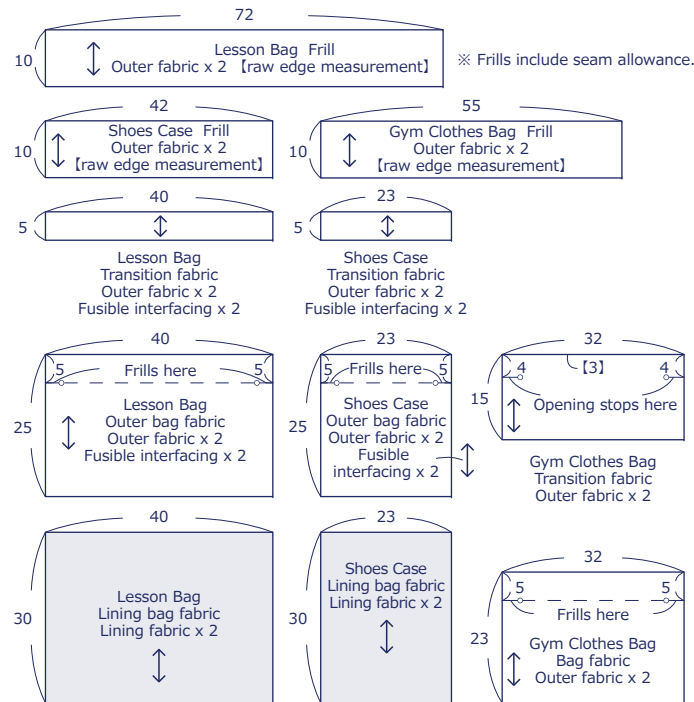

※ Adhere fusible interfacing on the back of the outer bag fabrics and transition fabrics for the lesson bag and shoes case.

Instructions

 
Front Side - (FrS), Reverse Side (RvS)

1. Make the frills

Finish the seam of the frills for the lesson bag, shoes case and gym clothes bag (one piece each).




Fold the hem in three and apply stitches. Gather the fabric.




2. Attach the frill to outer bag fabric

<Lesson Bag Front Portion>

Attach the frill (with seams finished).

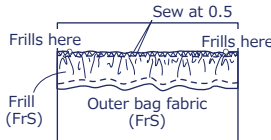


Baste the other frill.

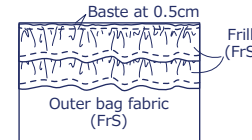


※ Repeat the process for the shoes case and gym clothes bag.

3. With the front sides facing each other, sew together the outer bag fabric and transition fabric



<Lesson Bag Front Portion>

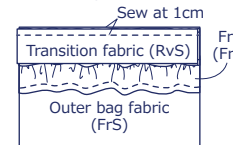

<Lesson Bag Back Portion>

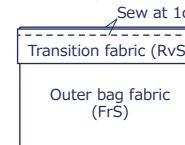

  
Press down the seam to the transition fabric side and apply stitches.




※ Repeat the process for the shoes case and gym clothes bag.

4. Baste the flat tape to the transition fabric of the lesson bag and shoes case

<Lesson Bag>

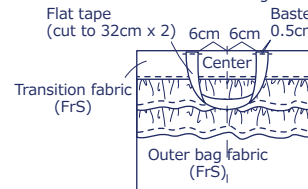

<Shoes Case>


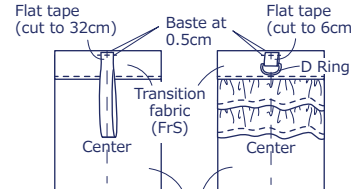


※ Repeat the process for the other side.

Outer bag fabric(FrS)

5. With the front sides facing each other, sew together the bag fabrics at the sides and bottom



<Lesson Bag>

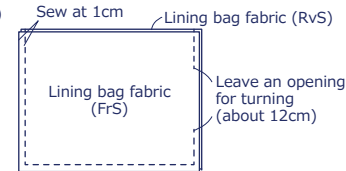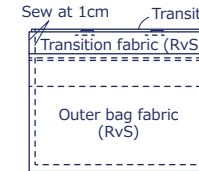

※ Repeat the process for the shoes case.

6. With the front sides facing each other, sew together the outer bag fabric and lining bag fabric at the top opening. Turn it inside out, and to finish, apply stitches around the opening

<Lesson Bag>

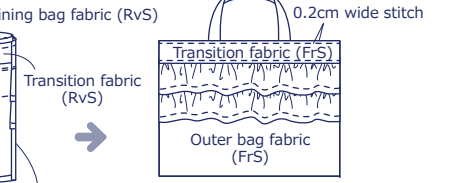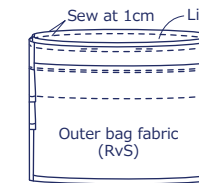


Press the seam open.


※ Close the opening for turning. ※ Repeat the process for the shoes case.

7. Baste the flat tape on the transition fabric for the gym clothes bag. Finish the seam. With the front sides facing each other, sew together at the sides and bottom


<Gym Clothes Bag>

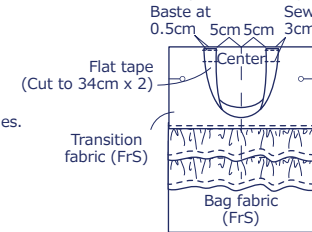

Finish the seam.

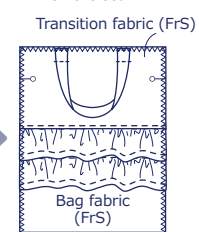

Sew up to where the opening stops.

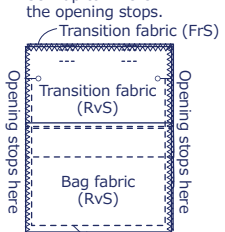


※ Repeat the process on the other side.

※ Finish the seam on the other side as well.


Sew at 1cm

8. Turn it inside out. Fold the bag's top opening and apply stitches. Put through the round cord through the opening to complete

Apply stitches on the opening.

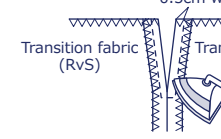

Press the seam open.

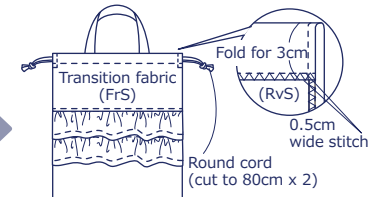

Round cord (cut to 80cm x 2)