

Tote Bag with Side Pockets

Design & work: Mioko Sugino

Size: 24cm (I) 36cm (W) 10cm (d)

Instructions Front Side - (FrS), Reverse Side (RvS)

(RvS)

3 Make the gusset.

3. Make the outer bag

kokka-fabric.com The craft projects and works featured in kokka-fabric.com are strictly for personal use and enjoyment Please refrain from selling handmade items using the same exact design (including the pieces made in different fabrics) featured in kokka-fabric.com.

on the main portion.

4 Fold in the outer

seam and sew.

Materials

Pattern

☐ Fabric (Outer Fabric · Pocket): 70cm×110cm

(Lining Fabric): 55cm×110cm (Tag Fabric): 7cm×4.5cm □ Twill Tape: 2cm wide x 28cm

☐ Magnetic Hook (Sew on type): One pair (1.4cm diameter)

Fabric shown for this sample: (Outer Fabric · Pocket) MUDDY WORKS JGH-114-1H

1. Make the pocket 2. Make the side outer fabric ①Fold the seam of the tag fabric and attach. Side outer fabric 3Fold the tape 1 (14cm) in half. (FrS) -Wrap the top end and sew. Tape (FrS) 4 With the front sides facing outside, fold the lining side in half and sew the dart at the bottom. Tag fabric (FrS) Pocket ②Apply zigzag stitches Linina sideouter side both pocket attachment (RvS) (FrS) Outer side Lining side Outer side (FrS) (FrS) (FrS) ①Layer the pocket and sew the bottom. Repeat the steps ② ④ on 0.1 the other fabric. Bottom fold line · Make two pieces. 2With the front sides facing outside, fold the pocket in half.

4. Make the lining bag following the steps in 3

5. Piece together the outer bag and lining bag

Unit: Centimeters (cm) Main Portion 49 Magnetic hook location Center fold Gusset5 Sew up to here Bottom center fold line

— 18 **—** •


Cutting Layout

(): Seam allowance. Raw edge unless seam is specified.

Lining Fabric

(1 piece)


55

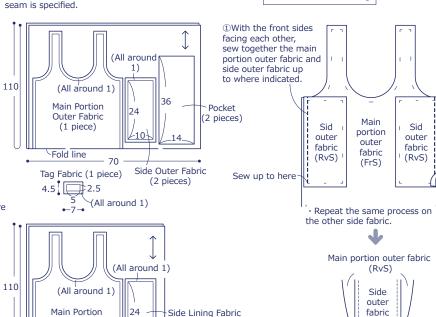

(2 pieces)

*⊱*10∼

Fold line

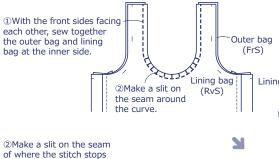

Lining bag

(FrS)

6 Attach the magnetic hook.


Be mindful so that it won't

show on the outer side.

(5) Apply stitches.

Outer bag (FrS)

③Turn it inside out. With the front sides facing each other, sew together the top ends on the right and left of the handles. Press the seam open.



· Repeat the process on the other side.

(FrS)