Tape Handle Tote

Design & work: Kokka Fabric

Size: about 30cm (I) about 49cm (w) about 24cm (gusset) (excludes handles)

Materials

□ Outer Fabric: about 110cm wide x 50cm

☐ Fusible Interfacing: about 105cm wide x 50cm

(RakuHari Presion Interfacing used)

□ Tape (Wide): about 45mm wide x 64cm


□ Tape (Narrow): about 30mm wide x 100cm

Fabric shown for this sample: YPA-66010-1D

Pattern

Unit: cm

Add 1cm seam allowance when cutting the fabric.

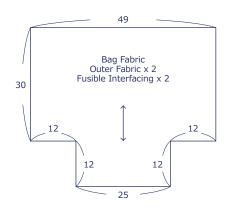

*Adhere fusible interfacing on the back of the outer fabrics.


kokka-fabric.com

The craft projects and works featured in kokka-fabric.com are strictly for personal use and enjoyment. Please refrain from selling handmade items using the same exact design (including the pieces made in different fabrics) featured in kokka-fabric.com.


Instructions Front Side - (FrS), Reverse Side (RvS)

1. Baste the tape (wide) to the bag fabric

Fold the wide tape (cut to 32cm) in half and apply stitches.




Baste the tape (wide) to the bag fabric.

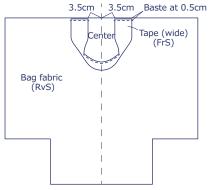


*Repeat the same process on the other pair.


2. With the front sides facing each other, sew together the bag fabrics at the sides and bottom

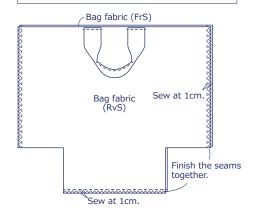


3. With the front sides facing each other, sew the gusset of the bag fabric



4. Attach the tape (narrow) to the bag opening to finish

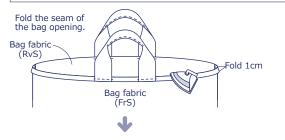

Fold the narrow tape (cut to 100cm) in half and sew.



Layer the tape over the bag opening and apply stitches.

