



# Triangular Boston Bag

Design & work: Yui Tamaki


Size: 26cm (l) 33.6cm (w - bottom) 11cm (d)

## Materials and Tools

- Fabric (Panel top outer fabric, Opening outer fabric, Panel bottom lining fabric, Gusset lining fabric) : 110cm wide×50cm  
(Panel top lining fabric, Opening lining fabric, Panel bottom outer fabric, Gusset outer fabric) : 110cm wide×50cm
  - Fusible interfacing : 90cm×65cm
  - Double fold bias binding tape : 2.5m (2.4cm wide)
  - Zipper: One piece (50cm long)
  - Handle (Artificial leather) : One pair (42cm long)
- Fabric shown for this sample:
- (Panel top outer fabric, Opening outer fabric, Panel bottom lining fabric, Gusset lining fabric) echino standard EKX-90100-100D
  - (Panel top lining fabric, Opening lining fabric, Panel bottom outer fabric, Gusset outer fabric) echino solid JG-95410-10n

## Pattern and Cutting Layout

Unit: cm. Seam allowance - 1cm.  
Use the same pattern for cutting Panel top lining fabric, Panel bottom outer fabric, Gusset outer fabric and Opening lining fabric,  
Adhere fusible interfacing on the back of the lining fabrics.

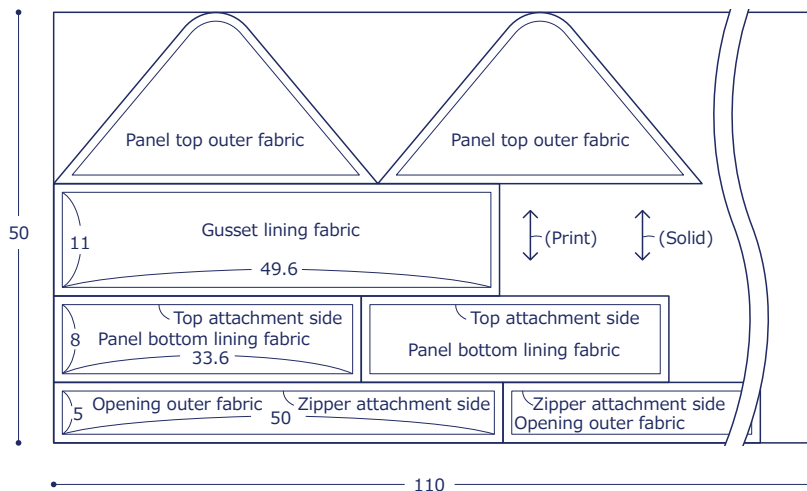

## Instructions

### 1. Make the opening fabric

① With the front sides facing each other, place the zipper in-between and sew together the outer and lining fabrics.

② Turn it over.

③ Repeat the process ①, ② on the other side.

### 2. Make the gusset

① With the front sides facing each other, place the opening fabric in-between and sew together the sides of the outer and lining fabrics.

② Turn it over and press down the seam to the gusset side.

### 3. Make the panel

① With the front sides facing each other, sew together the top and bottom panels.

• Make two pieces each for outer and lining fabrics.

② Press the seam open and cut the excess fabric.

③ With the front sides facing outside, baste the perimeter of the outer and lining fabrics.

• Make two pieces

### 4. Finish the bag

Leave the zipper open.

① Sew together the panel and opening and gusset outer fabric.

② Fold the bias binding tape in two and hem over the seam.

③ Turn it inside out and attach the handle.