



Round Tote Bag

Design & work: Kokka Fabric

Size: about 20cm (l)
 about 20cm (w)
 about 12cm (d)
 (excludes handles)



Materials

- Outer Fabric: about 110cm wide x 30cm
- Lining Fabric: about 110cm wide x 30cm
- Fusible Interfacing (heavy weight) about 110cm wide x 30cm
- Zipper: One piece (25cm)
- 4.5cm wide tape x 86cm

Fabric shown for this sample: LO-59040-1A

Pattern

Unit: Centimeters (cm) [] : Seam Allowance.
 When cutting the fabric, add 1cm seam allowance unless specified otherwise.

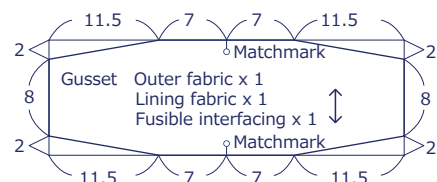
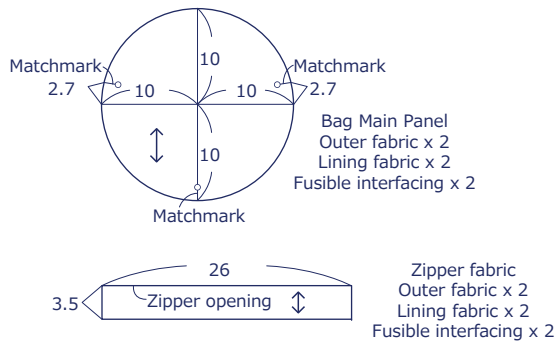


※ Adhere fusible interfacing on the back of the main panel, zipper outer fabric and gusset outer fabric.

Instructions FrS - (FrS), RvS (RvS)


1. Attach the tape to the bag main panel

Fold in half the center of the tape that is already cut. Apply stitches.

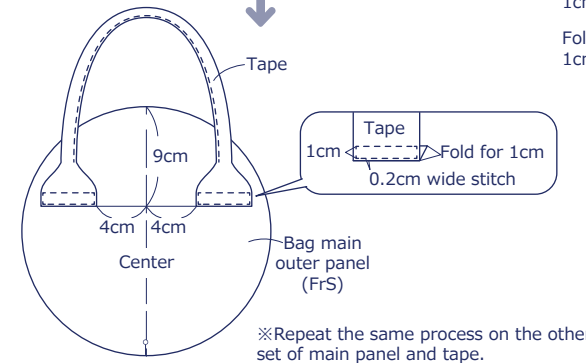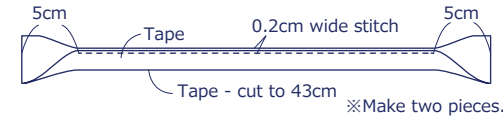

2. Attach the zipper to zipper outer fabric


Fold the seam of the opening side of the zipper outer fabric. Layer it with zipper and apply stitches.

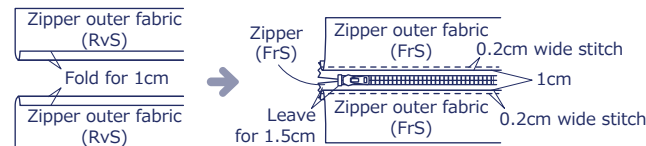

3. Sew together the zipper outer fabric and gusset outer fabric

With the front sides facing each other, sew together the zipper outer fabric and gusset outer fabric.


Press down the seam to outer gusset side and apply stitches.

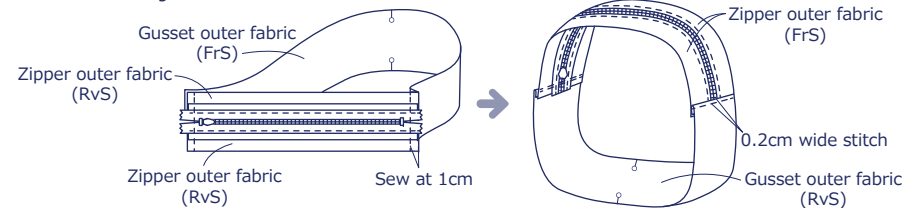

4. Sew together the zipper lining fabric and gusset lining fabric


Fold the seam of the opening side of the zipper lining fabric, and sew together with the gusset lining fabric with the front sides facing each other.

Press down the seam to the lining gusset side.

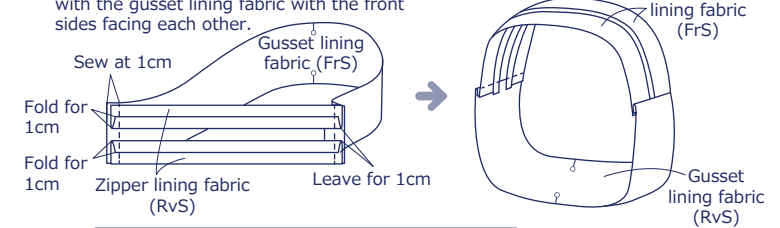


5. Sew together the main panel and gusset

With the front sides facing each other, sew together the main panel fabric and gusset with the zipper open.

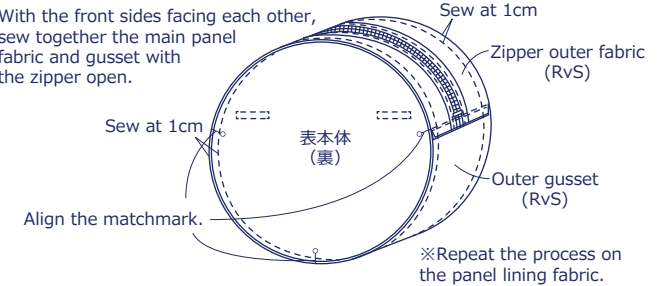

6. Attach the panel lining piece to the zipper fabric

With the front sides facing outside, sew together the outer and lining panel pieces using blind stitches.

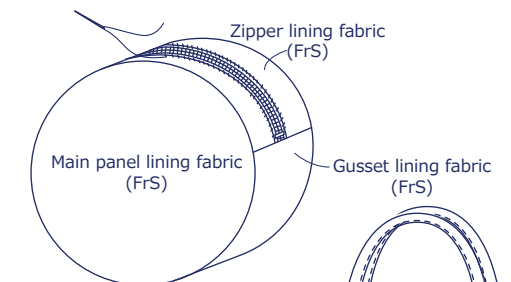

7. Turn the bag inside out and align the shape to finish

