*Close the opening for turning.

Small Tote Bag

Design & Work: Kokka Fabric

Size: about 22cm (I) about 35cm (w) about 10cm (gusset)(handles excluded)


Materials

- □ Outer Fabric (with pattern): about 110cm wide x 60cm
- ☐ Lining Fabric (solid): about 110cm wide x 60cm
- ☐ Fusible Interfacing (heavy weight) about 110cm wide x 60cm
- $\hfill\Box$ Dot Button about 15mm wide x One pair

Fabric shown for this sample: (Outer Fabric (left)) LGA-41050-1B (Outer Fabric (right)) LGA-41050-2A

Pattern and Cutting Layout

Unit: Centimeters (cm) Add 1cm seam when cutting the fabric.

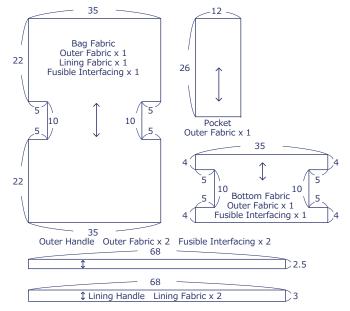

※Adhere fusible interfacing on the back of the outer bag fabric, bottom fabric and outer handle.

kokka-fabric.com

The craft projects and works featured in kokka-fabric.com are strictly for personal use and enjoyment Please refrain from selling handmade items using the same exact design (including the pieces made in different fabrics) featured in kokka-fabric.com.

Instructions Front Side - (FrS), Reverse Side (RvS) 1. Make the pocket 5. With the front sides facing each other, Fold the pocket opening in sew together the bag fabrics at the sides With the front sides facing half and apply stitches. outside, fold the pocket in half. Fold for 1cm 1----- 0.2cm Fold line Outer bag fabric Lining bag fabric ▼ Fold line wide stitch Pocket Pocket (FrS) (FrS) Sew at Sew at 1cm Outer 1cm bag 2. Make the handles Lining bag fabric fabric Leave an opening (RvS) Fold the seam of the handles. (RvS) for turning (about 16cm) Outer handle (FrS) Fold for 1cm ₹ 2.5cm Lining handle (FrS) Fold line Fold line Fold for 1cm Press the seam open. 6. Sew the gusset Bag fabric Layer the outer handle and lining handle and apply stitches. (RvS) Outer handle (FrS) 0.2cm wide stitch Sew at 1cm Align the center-Lining handle (FrS) ※Make two pieces. 7. With the front sides facing each other. sew together the bag fabrics at the top opening Attach the handle Outer bag fabric (RvS) 3. Baste the pocket on the outer Sew at 1cm bag fabric and attach the handle Outer handle (FrS) Baste the pocket. 3cm Outer bag fabric 7cm (FrS) Lining bag fabric Opening for turning 0.2cm wide stitch (RvS) Pocket 11.5cm 11.5cm 9.5cm 9.5cm (FrS) (FrS) Outer bag fabric Baste at 0.5cm (FrS) 8. Turn the bag inside out. Apply stitches around the top opening. Attach the dot button to finish *Repeat the same process for another handle. 4. Sew together the bottom fabric and bag fabrics Layer the bottom fabric over the outer bag fabric and apply stitches. Fold the seam of Outer Dot button the bottom fabric. bag fabric 0.2cm wide stitch (FrS) 0.2cm wide stitch Fold for 1cm **XAvoid** the handle Bottom fabric Bottom fabric Outer bag fabric (FrS) (RvS) (FrS)

0.2cm wide stitch

Fold for 1cm