



# Tool Roll

Design & making :  
Arounna Khounnoraj of bookhou

Size: 9.5" (l) 16" (w) (when opened)


## Materials

- A - Tool roll body: 1 interior and 1 exterior (10.5" H x 17" W)
- B - Pocket B: 1 exterior (8" H x 17" W)
- C - Pocket C: 1 exterior (8" H x 17" W)
- Note: One side is 8" and the other is 5" to create a slant.
- D - Tool guard flap: 1 interior and 1 exterior (4" H x 17" W)
- Tool roll tie (0.5" H x 48" L)

Fabric shown for this sample: EKX-1400-1A  
EKX-1400-2D  
EKX-1400-3A

## Pattern & Cutting Layout

Unit: inch

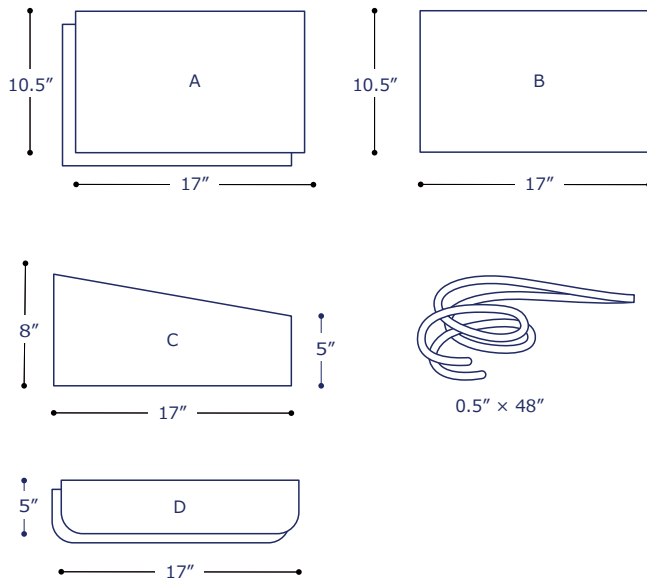

have fun with KOKKA fabric! produced by KOKKA

[kokka-fabric.com](http://kokka-fabric.com)


The craft projects and works featured in kokka-fabric.com are strictly for personal use and enjoyment. Please refrain from selling handmade items using the same exact design (including the pieces made in different fabrics) featured in kokka-fabric.com.

## Instructions




### 1. Sew a rolled hem on the long side of each of the pockets

To create a rolled hem, turn under the fabric twice at 1/4 of an inch and sew close to the edge of the fold.

① Fold over twice at 1/4 of an inch.

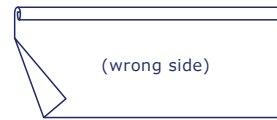


② Sew close to the edge of the fold.

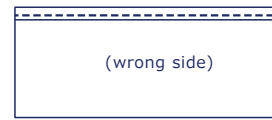


### 2. Assemble the tool guard flap


① Place the tool guard flap interior and exterior pieces together and edges aligned.




② Sew from the short end, around the curve, across the bottom, around the second curve up to the opposite corner, leaving the top unsewn.



③ Clip the corners, turn the fabric right side through the unsewn top, and press.

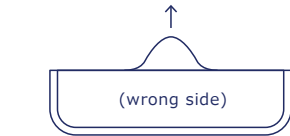


④ Baste the long raw edge of the tool guard flap close.


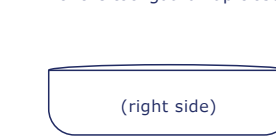


### 3. Attach pocket C to pocket B, create the tool dividers, and attach the tool roll body A to the pockets

① Lay the slanted pocket C on top of pocket B, so the sides and bottoms are aligned.




② Sew dividing lines for tool compartments from the bottom to the slanted top of pocket C. Leave a few wider gaps for the next step.

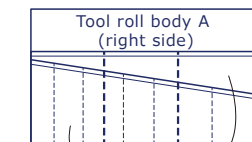

③ Place pockets B and C on the top interior tool roll body A, aligned along the sides and bottom. Sew two additional dividing lines through all layers from the bottom edge to the top of pocket B. You can pre-measure the lines and mark with a fabric-safe pen.


### 4. Attach the tool guard flap and tie to the tool roll body

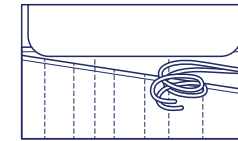

① Place the tool guard flap on top of the interior tool roll body with the unsewn edge aligned along the top making sure it is centered with the tool roll body underneath extending beyond both sides.

② Place the tie, facing inwards, at the midpoint on the right side, with one end extending beyond the edge about 1". Baste in place.


### 5. Attach the tool roll body exterior piece to the body

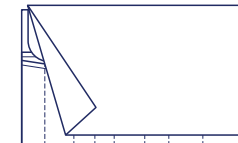

① Place the tool roll body exterior piece on top the tool roll body interior/pocket assembly, facing down so the right sides are facing and pin together.


② Starting from the top, sew along the entire perimeter of the piece, leaving a 3" unsewn gap midway on the top edge to turn the piece right side out.

### 6. Clip the edges and turn piece right side out

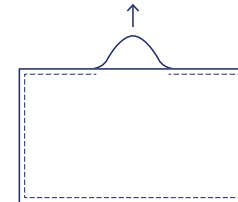

Turn the piece right side out and press the edges flat with an iron.

### 7. Edgestitch the tool roll body at 1/8 of an inch

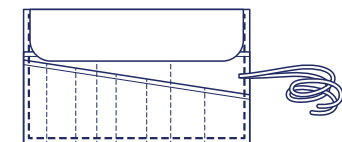

Once you edgestitch as above, you have finished your tool roll!