

Drawstring Bag with Handles

Design & Work: Yui Tamaki

Size: 41cm (I) 40cm (W)

Materials

☐ Fabric (Outer Fabric, Handle): 110cm wide x 50cm (Lining Fabric (Artificial Leather)): 90cm x 40cm


☐ Fusible interfacing: 90cm x 50cm ☐ Leather Cord: 1.8m (0.5cm diameter)

□ Embellishment of your choice

Fabric shown for this sample: (Outer Fabric, Handle) uremos EKA-1060-1A

Pattern and Cutting Layout

Unit: cm. Seam allowance: 1cm. Adhere fusible interfacing on the back of the outer fabric.

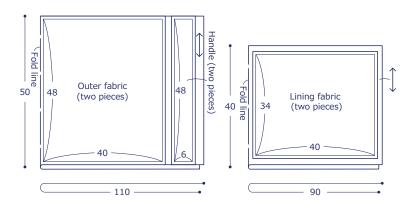

kokka-fabric.com

The craft projects and works featured in kokka-fabric.com are strictly for personal use and enjoyment. Please refrain from selling handmade items using the same exact design (including the pieces made in different fabrics) featured in kokka-fabric.com.

made in different fabrics) featured in kokka-fabric.com. **Instructions** Front Side - (FrS), Reverse Side (RvS) 1. Make the handles 2. Make the main portion of the bag 1 With the front sides facing 1 With the front sides each other, sew together the facing each other, outer and lining fabrics at the fold in half and sew. top opening. Outer (RvS) fabric Lining fabric Outer fabric (RvS) (FrS) (RvS) Press the seam open. 7 Cord opening 4 (=★) Outer fabric 3 Turn it inside out. (FrS) Opening Adjust the seamline to the center. · Make two pieces. 3 Press down the seam from Sew both sides, ① to the lining fabric side. leaving an opening for turning and for (FrS) the cord. 4 Fold both edges of the seam. Lining fabric Opening for Lining fabric Make two pieces. (FrS) turning13 3. Finish the bag ① Turn it inside out and close the opening for turning. 2 With the front sides facing each other, sew the bottom of the outer fabrics and ② Fold at the opening. With the Handle: lining fabrics respectively. front sides facing outside, layer the outer fabric and lining fabric. (5) Sew to secure the seam 4 Attach the handles. of the cord opening. 6 Attach the Be careful not to reveal embellishment the stich line on the front. ⑤ Put through of your choice 3 Apply stitches at the cord (90cm to the handle. the cord opening. each) and tie the ends. (RvS) Outer fabric

Outer fabric (FrS)

(FrS)